



WR30 WAFFLE MAKER



IMPORTANT SAFEGUARDS:

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electrical shock, do not immerse cord, plug or cooking unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or has been damaged in any manner.
7. The use of accessory attachments is not recommended by the manufacturer. It may cause hazards.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
11. Plug cord into wall outlet. To disconnect, remove plug from wall outlet.
12. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

This appliance is intended for household use only. No user-serviceable parts inside. Refer servicing to qualified service personnel. If the appliance is of the ground type, the extension cord should be a grounding 3-wire cord.

BEFORE FIRST USE

Before using for the first time, the baking surfaces should be cleaned with a moist cloth. We recommend lightly greasing the baking surfaces when using for the first time. This will not be necessary on subsequent occasions. The first two or three waffles should not be eaten. Before filling with batter, please decide if you want medium or crispy waffles by using the adjustable thermostat knob.



SPECIAL FEATURES

1. Power Light
2. Ready Light
3. Adjustable Thermostat Knob
4. Handle
5. Temperature Range Indicator
6. Latch

HOW TO MAKE WAFFLES

1. Insert the plug into a 120V/60Hz only outlet.
2. The red power light will illuminate when the appliance is plugged into the outlet. The red power light indicates that the unit is on and is preheating.
3. The desired degree of browning can be achieved with the adjustable thermostat. Choose your desired temperature by turning the adjustable thermostat knob from low to high (or high to low) setting. When the appliance reaches the set temperature, the green ready light will illuminate and 6 beeps will sound to let you know it is time to pour the waffle (pancake) batter into the bottom of the grid (Belgian plate). The appliance will maintain the set temperature during the entire baking process. **NOTE:** Be sure to close the lid before baking begins.
4. The green ready light will turn off when the baking operation begins. It will light up again along with 3 beeps to let you know the waffle is done.

NOTE:

- Care must be taken to ensure that fingers do not come into contact with the plates.
 - Bake only with the lid closed.
5. When baking is finished, open the waffle maker and remove the waffle with a plastic or wooden spatula. Never use

metal knife as this may damage the non-stick coating.

6. **NOTE:** The waffle maker does not turn off automatically after baking is complete. The only way to turn off the waffle maker is to remove the plug from the outlet. Be sure to unplug the waffle maker after each use.

IMPORTANT: Contents are hot. Use caution when removing waffle from the plates.

7. Always unplug the appliance from the outlet after baking is complete. Allow to cool before taking off or putting on any parts, and before cleaning. **CAUTION:** Contents are hot.
8. Please return the appliance to the nearest service facility for repair, adjustment and replacement when both red and green lights flash.

CLEANING:

- Always pull out the main plug before any cleaning operation and allow the appliance to cool down.
- Never dip the appliance into water or hold it under running water.
- Wipe down the casing with a moist cloth only.
- Use a damp cloth and a non-abrasive cleaning detergent on the plates.
- Never use sharp or pointed objects or any abrasive cleaning agents for cleaning purposes.

NEVER IMMERSE THE APPLIANCE IN WATER OR OTHER LIQUID.

Limited Warranty

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary please contact our toll free hotline at 1-800-322-3848 or log onto our website at www.delonghi.com.

For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.